




Blue Sky Safes

Operating Instructions for Phoenix EDL21

The Phoenix Safe Company

Operating Instructions for **Phoenix EDL21**

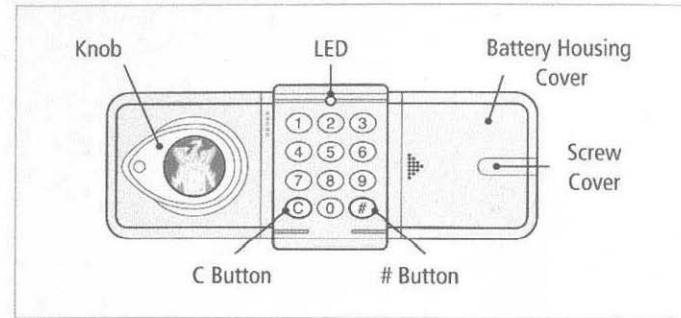

OPENING THE PHOENIX EDL 21 LOCK FOR THE FIRST TIME

- Step 1.** Press button C
- Step 2.** Enter 4 digit factory code 1,2,3,4
- Step 3.** Press button #. A 4 second melody tone confirms the correct code
- Step 4.** Turn knob clockwise to open the lock

- * At the end of the code entry sequence a warning tone rings 4 times if an incorrect code has been entered.
- * If an incorrect code is entered five times the lock will become inactive until the correct code is available. To reactivate the lock enter the correct code C****# twice, consecutively.

ENTERING A NEW PERSONAL CODE

With the door in the open position:

- Step 5.** Press button #
- Step 6.** Enter the present code (this may be either the factory default code or a previously set code)
- Step 7.** Press button #
- Step 8.** Enter the new code minimum of 4 digits and maximum 16 digits
- Step 9.** Press button #

The new code is confirmed and accepted with a 4 second melody tone.

USING THE PHOENIX EDL 21 LOCK

Follow Steps 1-4 using the new personal code at Step 8.

BATTERIES

Battery life span is two years, when used an average of 3 times a day.